

PRODUCT SAFETY ASSESMENT SHEET/HAZARD SHEET

S & S Equipment Hire Pty Ltd

Phone: (03) 5133 9958 Fax: (03) 5133 9986 55 Alexanders Road, Morwell VIC 3840

PLANT INFORMATION

PSA Ref #: 00286

Model No: RGV13100TH

Plant Name: CROMMELINS HIRE PACK GENERATOR RGV13100TH

Manufacturer: Crommelins Machinery WA

Manufacturer's Website: www.crommelins.com.au
Web Link for Plant: www.crommelins.com.au.
Potential noise level in dB: 95 to less than 100

Required hearing protection class: 3

Mandatory Personal Protective Equipment:







Foot Protection

Hearing Protection

Protective Clothing



RISK ASSESSMENT INFORMATION

Operator Competency: Plant Licence Not Required

Potential Hazard(s)

Explosion or fire from fuel

vapours.

Risk Level

Medium

Control Measure(s)

 Stop the engine before refuelling. Do not refuel while hot. Avoid spillage of fuel when refuelling. Ensure the fuel cap is properly secured after refuelling. Carry out visual checks for fuel leaks and repair before operation. Keep flammables away from the engine. Do not smoke while servicing or refuelling this machine.

Exposure to ultraviolet radiation

if working outdoors.

Manual handling hazard.

Medium

Medium/Low

Wear sunscreen, hat, long sleeves and long trousers.

Use the lifting bar provided for a mechanical

· Weight 200 kgs.

Inhaling exhaust or fuel fumes. Medium/Low

 Only operate in a well ventilated area. Do not operate in a confined space. Avoid breathing petrol fumes. Avoid skin contact with petrol.

Coming into contact with hot

parts of the engine.

Medium/Low

 Let the engine cool down before attempting any maintenance. Avoid contact with hot

components.

Hearing damage from excessive Low

noise.

 Hearing protection with a rating of 15db must be worn. Price Price

 Ensure equipment is tested/tagged for compliance with electrical safety testing requirements.

or equipment.

Coming into contact with moving Low parts.

 All moving parts are protected. Do not remove guards or covers.

Customer Identified Hazard(s)

Key Operating Instructions

Use unleaded fuel only.

To start, turn on the fuel tap by moving the lever to the down position.

Ensure the stop switch on the engine is in the ON position.

For cold starting close the choke lever.

Start the engine by turning on the ignition key.

As the engine warms up return the choke lever to the open position.

* The unit is factory set to provide the correct power supply, do not reduce throttle or adjust the speed setting as this will reduce the output required to power the appliance.

Do not overload the unit by attempting to power an appliance beyond the output capabilities of the Generator.

Use only heavy duty 15 AMP extension leads.

If the safety switch trips off disconnect the faulty appliance and have it checked.

Test the operation of the safety switch before connecting any appliance.

To stop the machine, turn off the ignition key and turn off the fuel tap.

Please refer to the User Guide and Operator's Manual for Operating Instructions

The Safety Information on this assessment has been developed for the Hire and Rental Industry to assist in the safe operation of this equipment.

This information contains general information only and should not be relied upon as a substitute for professional advice, which the user should seek before operating.

Once printed this is an uncontrolled copy.