

S & S Equipment Hire Pty Ltd

Phone: (03) 5133 9958 Fax: (03) 5133 9986

55 Alexanders Road, Morwell VIC 3840

PLANT INFORMATION
PSA Ref #: 00284

Model No: D69H

Plant Name: CROMMELINS HIRE PACK GENERATOR D69H

Manufacturer: Crommelins Machinery WA

Manufacturer's Website: www.crommelins.com.au

Web Link for Plant: www.crommelins.com.au.

Potential noise level in dB: 95 to less than 100

Required hearing protection class: 3

Mandatory Personal Protective Equipment:

**CROMMELINS™
MACHINERY**

 Foot
Protection

 Hearing
Protection

 Protective
Clothing

RISK ASSESSMENT INFORMATION
Operator Competency: Plant Licence Not Required

Potential Hazard(s)	Risk Level	Control Measure(s)
Explosion or fire from fuel vapours.	Medium	<ul style="list-style-type: none"> Stop the engine before refuelling. Do not refuel while hot. Avoid spillage of fuel when refuelling. Ensure the fuel cap is properly secured after refuelling. Carry out visual checks for fuel leaks and repair before operation. Keep flammables away from the engine. Do not smoke while servicing or refuelling this machine.
Exposure to ultraviolet radiation if working outdoors.	Medium	<ul style="list-style-type: none"> Wear sunscreen, hat, long sleeves and long trousers.
Manual handling hazard.	Medium/Low	<ul style="list-style-type: none"> These units require a multiple lift. Do not attempt a single person lift. Use correct lifting techniques. Use the lifting bar provided for a mechanical lift. Weight 108 kgs.
Inhaling exhaust or fuel fumes.	Medium/Low	<ul style="list-style-type: none"> Only operate in a well ventilated area. Do not operate in a confined space. Avoid breathing diesel fumes. Avoid skin contact with fuel.
Coming into contact with hot parts of the engine.	Medium/Low	<ul style="list-style-type: none"> The muffler is fitted with a heat shield. Let the engine cool down before attempting any maintenance. Avoid contact with hot components.

Hearing damage from excessive noise.	Low	<ul style="list-style-type: none"> Hearing protection with a rating of 15db must be worn.
Risk of electric shock.	Low	<ul style="list-style-type: none"> The unit is fitted with an electrical safety switch. Ensure testing of the safety switch is carried out before each use. Press the test button to check. Do not operate in contact with water. Do not operate with faulty leads or equipment. Ensure equipment is tested/tagged for compliance with electrical safety testing requirements.
Coming into contact with moving parts.	Low	<ul style="list-style-type: none"> All moving parts are protected. Do not remove guards or covers.

Customer Identified Hazard(s)

Key Operating Instructions

Use DIESEL fuel only.
 To start, turn on the fuel tap by moving the lever to the down position.
 Ensure the throttle lever is in the ON position.
 Start the engine by pulling the recoil rope.
 * The unit is factory set to provide the correct power supply, do not reduce throttle or adjust the speed setting as this will reduce the output required to power the appliance.
 Do not overload the unit by attempting to power an appliance beyond the output capabilities of the Generator.
 Use only heavy duty 15 AMP extension leads.
 If the safety switch trips off disconnect the faulty appliance and have it checked.
 Test the operation of the safety switch before connecting any appliance.
 To stop the machine, return the throttle to low speed and turn off the fuel tap.
 Please refer to the User Guide and Operator's Manual for Operating Instructions

The Safety Information on this assessment has been developed for the Hire and Rental Industry to assist in the safe operation of this equipment.

This information contains general information only and should not be relied upon as a substitute for professional advice, which the user should seek before operating.

Once printed this is an uncontrolled copy.

